

Rowing Outrigger Installation Instructions

1. **Parts List**

- | | |
|-------------------------------|----------------------------|
| 2 – Rowing Outrigger Brackets | 2 – Oar Lock Bushings |
| 2 – 1 3/4" Oar Locks | 2 – 3/4" Socket Cap Screws |
| 2 – Hitch Pins | |

2. **Tools Required**

- 5/32" Hex Head Screwdriver or Drill Bit

3. **Remove Side Handles** – Remove the two side handles. The screws, washers, and deck rings will be used with the outrigger. The side handles can be stored for future use.

4. **Installation for Solo Use**

- a. **Outriggers** – Position the outriggers so they flare towards the stern of the NuCanoe when aligned over the side handle inserts. Use the standard screw and washer on the stern side insert to attach one side of the outrigger, and the 3/4" screw, washer, and deck on the bow side insert.
- b. **Seat** – Position the molded bench seat with the slot towards the bow and over the third set of inserts from the bow. Use the seat screws to attach the seat.



5. **Installation for Tandem Use**

- a. **Outriggers** – Position the outriggers so they flare towards the bow of the NuCanoe when aligned over the side handle inserts. Use the standard screw and washer on the stern side insert to attach one side of the outrigger, and the 3/4" screw, washer, and deck on the bow side insert.
- b. **Seats** – Position the molded bench with the slot towards the bow and over the second set of inserts from the bow. Use the seat screws to attach the seat. This is for the rower. The passenger seat is installed over either of the two sets of inserts closest to the stern.



6. **Outer Bracket Adjustments** – The outer gunwale bracket may be adjusted to better fit by loosening the lock nuts and sliding the bracket to achieve a tight, snug fit against the outer gunwale. Once this is achieved, tighten the lock nut.

7. **Set-up Oars** – Insert the oars through the oar locks. Install the oar locks so the reinforced straight side is towards the bow of the NuCanoe, and the rounded side is towards the stern. Use the hitch pin in the oar lock to secure it into the outrigger bracket. Ensure the oar collars are properly installed for best results.

8. **Ready for use!** - Row, Row, Row!

9. **Questions or Comments?** – Please contact us at info@nucanoe.com.