

Stern Anchor Installation Instructions

Note: These instructions are for standard use. Locations of items may be adjusted as desired. Consider how you will use the anchor system and desired cleat location prior to installation.

1. Parts List

- 1 – Zigzag Cleat
- 2 – Pad Eyes
- 6 – Rivets


Transom Plug w/ Bushing
35' Black 1/4" Reflective Cord

2. Tools Required



- Rivet gun
- Tape measure or yardstick

Drill w/ 13/64" Bit
Marine silicon sealant

3. **Install Zig Zag Cleat** – The zigzag cleat installs stern-side of either side handle. The first hole is 4" behind the side handle and 3" down from the gunwale. Mark the location, and then hold the zigzag cleat over the spot to mark the second hole. Drill both with a 13/64" drill bit. Apply silicone sealant to the rivets and back of the zigzag cleat, and install with rivet gun. Clean off excess sealant.

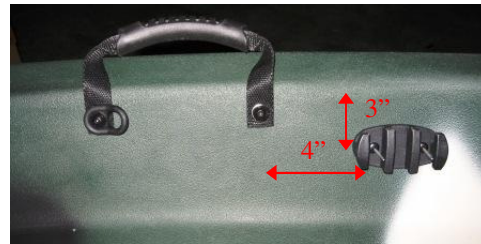

4. **Install Pad Eyes** – The first pad eye is installed 20" to the stern of the zigzag cleat and the second pad eye is installed 20" to the stern of the first pad eye. Drill the top hole for both locations 2 1/2" below the gunwale, then use the pad eye to mark & drill the bottom hole location. Apply silicone sealant to the rivets and back of the pad eyes, and install with rivet gun. Clean off excess sealant.

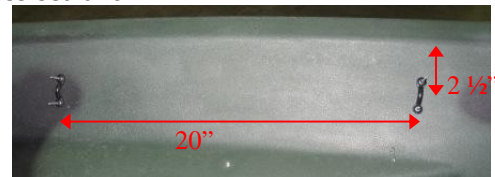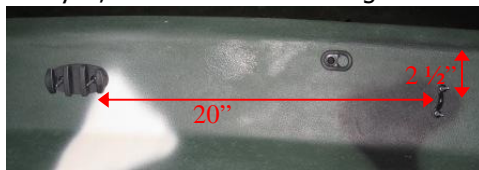

5. **Install Transom Plug** – Insert the tapered plug into the stern hole from the outside of the transom with the flanged bushing side out. Hit it with a rubber mallet if necessary to achieve a snug and secure fit.
6. **Install Anchor Line & Attach Anchor** – Feed the anchor line through the plug and the two pad eyes. Secure it by wrapping around the zigzag cleat. Tie the opposite end of the rope securely to the anchor.



7. **Ready for use!** – If you have questions or comments please contact your NuCanoe dealer or email us at info@nucanoe.com.