

Trolley Anchor Installation Instructions

Note: These instructions are for standard use. Locations of items may be adjusted as desired. Consider how you will use the anchor system and your desired cleat location prior to installation.

1. Parts List

1 – Zig Zag Cleat	3 – Pad Eyes	10 – Rivets
2 – Deck Rings	1 – 2" Ring	25' – Black ¼" Reflective Cord
1 – Cord Hook		


2. Tools Required

Rivet tool	Drill w/ 13/64" Bit
Tape measure or yard stick	Marine silicon sealant


3. **Install Zig Zag Cleat** – The zigzag cleat installs stern-end of either side handle. The first hole is 4" behind the side handle and 3" down from the gunwale. Mark the location, and then hold the zigzag cleat over the spot to mark the second hole. Drill both with a 13/64" drill bit. Apply silicone sealant to the rivets and back of the zigzag cleat, and install with rivet gun. Clean off excess sealant.



4. **Install Deck Rings** – The first deck ring is installed 2" behind the bow plug centered on the gunwale. The second deck ring is installed 6" in front of the square stern centered on the gunwale. Drill both locations with a 13/64" drill bit. Apply silicone sealant to the rivets and install with rivet gun. Clean off excess sealant.

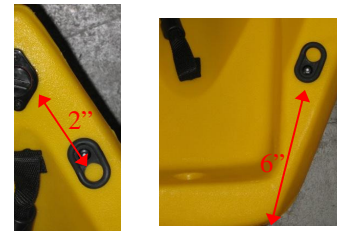

5. **Install Pad Eyes** - The first pad eye is installed on the side gunwale 26" behind the bow deck ring and 1 ½" below the gunwale. The second pad eye is installed on the side gunwale 26" behind the first pad eye and 1 ½" below the gunwale. The third pad eye is installed on the side gunwale 26" behind the zigzag cleat and 1 ½" below the gunwale. Drill the first hole for all locations, and then use the pad eye to determine the location for the bottom hole. Apply silicone sealant to the rivets and install with rivet gun. Clean off excess sealant.

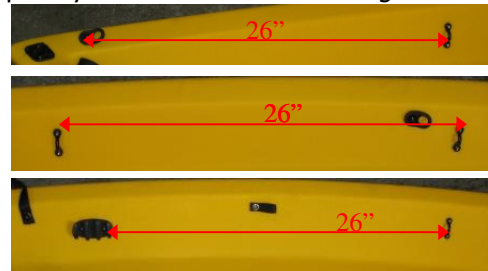

6. **Install Reflective Cord** – Clip the cord hook on one end of the rope to the ring. Starting at the bow, run the other end of the reflective cord through the deck ring from the top down. Pull it through the three pad eyes, and up through the stern deck ring. Tie the end of the rope to then ring with a bow knot.



7. **Ready for use!** - The reflective cord can be pulled from the bow or stern side of the anchor trolley, moving the ring. When in the desired position, feed the line through the zigzag cleat to lock in place. Remove the cord hook from the ring with the rope locked on the cleat to make a boat leash for wade fishing.

8. **Questions or Comments?** – Please contact us at info@nucanoe.com.