




2018 Frontier Custom Height Seat Base


Installation Instructions

Installation video available at <http://www.nucanoe.com/owners-area/>


Determine Seat Height – The orientation of the Cross Beams determines the seat height.

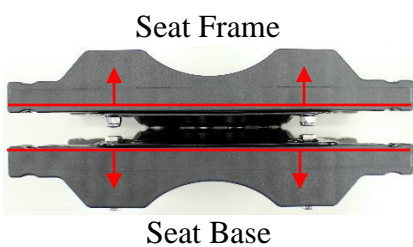

LOW POSITION

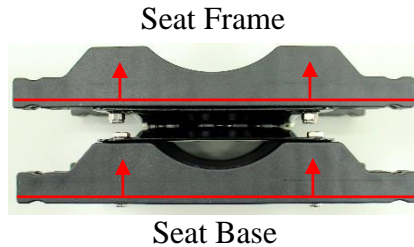


MIDDLE POSITION


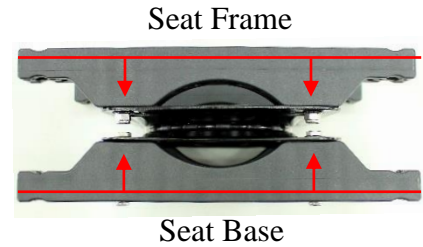


HIGH POSITION

Assemble Seat – Requires 7/16" wrench.

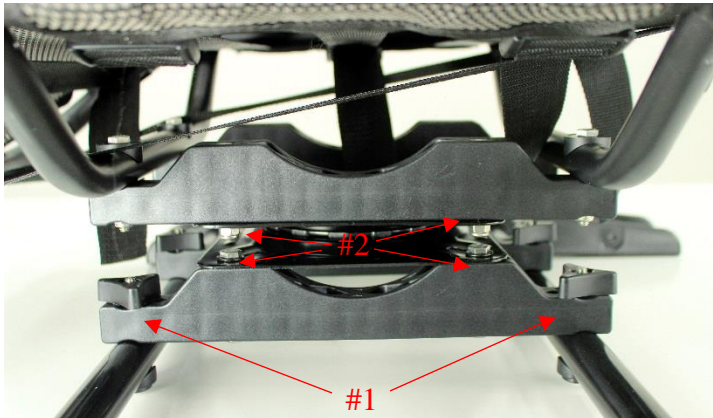

1. Connect Cross Beams to Seat Base
Using Hardware Pack #1, connect 2 Cross Beams to the base, using the orientation for your desired height. Tighten knobs.

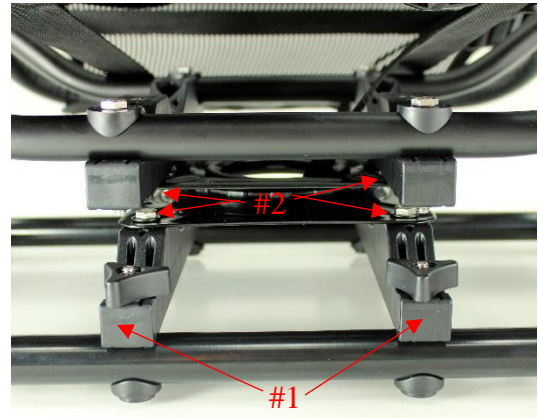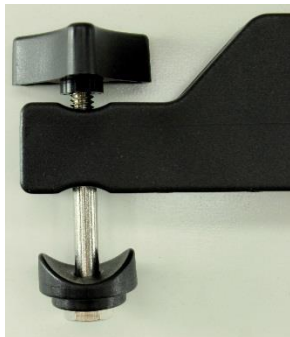

2. Connect Cross Beams to Swivel
Connect Swivel to Seat base cross beams using hardware pack #2. Insert bolts from top and use lock nuts on bottom.



5. Height Adjustment – Re-orient the Cross Beams as desired to adjust the Height. To add 1" or 2" to the High Position, use the Item #3006 Lift Kit. To achieve an Ultra-Low Height 4" less than the Low Position, use the Item #3004 Ultra Low Kit.



Frontier Custom Height Base


Assembly Instructions for 2017 & Prior Pinnacle Seats

Note: 2017 & Prior Pinnacle Seats have 2 x 9.5" Tubes on the Lower Seat Frame


1. Remove Current seat base from the swivel.
2. Choose your desired height based on the positions below
3. Position the Cross Beam as indicated and connect it the Cross Bars with Hardware Pack #1.
4. Reconnect the swivel to the Custom Height seat base Cross Beams using Hardware Pack #2.
5. Secure to the track using the provided Mighty Bolts and Knobs.

Due to the variance of track width per model year, it may require you to remove supplied round spacers at the end of the tubes to achieve desired width.

Medium Position

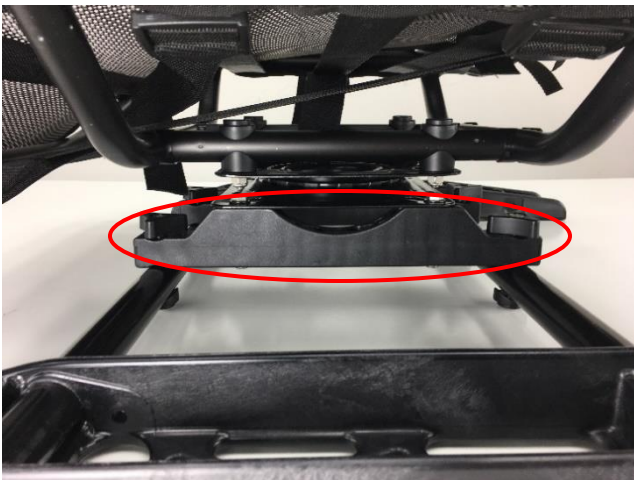

Low Position

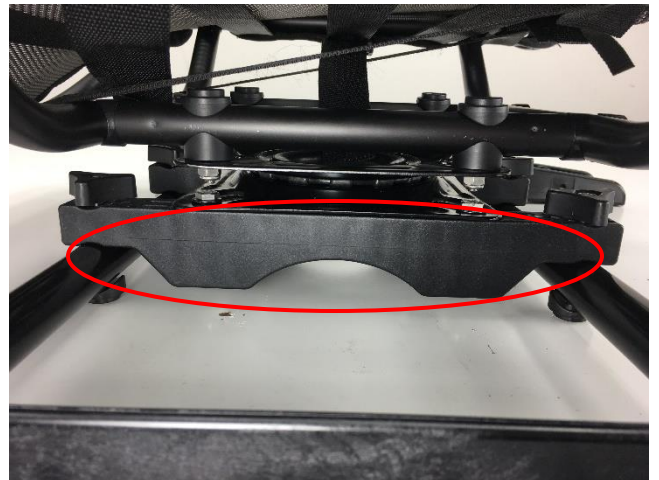

For an additional 1-2" of height, use *Item #3006 Seat Lift Kit*.